

安装IC时各脚电压(没上光头)

IC1-5709

PIN	1	2	3	4	5	6	7	8
STOP	-0.13	-2.84	0.16	0.86	-0.95	4.84	0	0
PLAY	-0.18	-2.84	0.16	0.86	-0.95	4.81	0	0
PIN	9	10	11	12	13	14	15	16
STOP	0	-0.49	-5.81	0.08	4.78	4.78	0.03	-4.56
PLAY	0	-0.49	-5.78	0.08	4.78	4.78	0.03	-4.53
PIN	17	18	19	20				
STOP	0	0.01	-0.01	0.04				
PLAY	0	0.01	-0.01	0.04				

IC2-5708

PIN	1	2	3	4	5	6	7	8
STOP	3.46	-5.8	-4.43	-0.07	0.01	0.02	-4.91	-4.48
PLAY	3.44	-5.78	-4.41	-0.04	-1.7	0.02	-4.71	-4.48
PIN	9	10	11	12	13	14	15	16
STOP	-4.99	-4.95	-0.45	-0.19	4.19	0	0	0
PLAY	-4.92	-4.93	-0.19	-0.19	4.19	0	0	0
PIN	17	18	19	20	21	22	23	24
STOP	0.39	4.49	0.07	4.76	0.12	-5.19	-4.54	0.03
PLAY	4.58	4.46	0.07	0.04	4.76	-5.19	-4.5	0.04
PIN	25	26	27	28				
STOP	-5.15	-5.02	0.1	4.82				
PLAY	1.35	-4.99	0.03	4.81				

U3-TCA0372

PIN	1	2	3	4	5	6	7	8
STOP	-1.01	12.02	-8.57	-12.56	0	0	0.01	0.02
PLAY	2.53	12.02	-8.57	-12.56	0	0	0.01	0.02
PIN	9	10	11	12	13	14	15	16
STOP	-12.56	-12.56	-12.56	-12.56	-12.56	-12.56	-12.56	-12.56
PLAY	-12.56	-12.56	-12.56	-12.56	-12.56	-12.56	-12.56	-12.56

U4-4560

PIN	1	2	3	4	5	6	7	8
STOP	-0.06	2.29	2.28	-12.67	3.12	3.13	5.17	12.01
PLAY	4.56	4.74	4.71	-12.67	3.12	2.77	2.21	12.01

U6-MC1458

PIN	1	2	3	4	5	6	7	8
STOP	0.28	0	0	-12.65	0	0.27	-12.65	12.02
PLAY	0.28	0	0	-12.65	0	0.27	-12.65	12.02