

没安装IC时各IC座脚电压

IC1-5709

PIN	1	2	3	4	5	6	7	8
STOP	-0.34	0.47	4.6	0	-0.95	4.92	0	0
PLAY	-0.34	0.47	4.6	0	-0.95	4.92	0	0
PIN	9	10	11	12	13	14	15	16
STOP	0	0	-5.9	0.08	4.78	4.78	0.05	-5.87
PLAY	0	0	-5.9	0.08	4.78	4.78	0.05	-5.87
PIN	17	18	19	20				
STOP	0	0.16	0.03	-0.07				
PLAY	0	0.16	0.03	-0.07				

IC2-5708

PIN	1	2	3	4	5	6	7	8
STOP	0	-5.9	-0.05	4.61	0.07	0.74	0.03	0.03
PLAY	0	-5.9	-0.05	4.61	0.07	0.74	0.03	0.03
PIN	9	10	11	12	13	14	15	16
STOP	-0.02	-0.04	-0.14	0.1	4.48	-0.04	0	0
PLAY	-0.02	-0.04	-0.04	0.1	4.48	-0.04	0	0
PIN	17	18	19	20	21	22	23	24
STOP	1.67	4.88	3.35	4.77	4.82	-5.9	-5.89	0.03
PLAY	1.67	4.88	3.35	0.03	4.82	-5.9	-5.89	0.03
PIN	25	26	27	28				
STOP	-0.04	-0.03	-5.9	4.92				
PLAY	-0.04	-0.03	-5.9	4.92				

U3-TCA0372

PIN	1	2	3	4	5	6	7	8
STOP	0.71	11.99	0	-13.4	0	0	0	0.74
PLAY	0.71	11.99	0	-13.4	0	0	0	0.74
PIN	9	10	11	12	13	14	15	16
STOP	-13.37	-13.37	-13.37	-13.37	-13.37	-13.37	-13.37	-13.37
PLAY	-13.37	-13.37	-13.37	-13.37	-13.37	-13.37	-13.37	-13.37

U4-4560

PIN	1	2	3	4	5	6	7	8
STOP	4.83	4.87	2.27	-13.38	3.12	4.77	4.73	11.97
PLAY	4.83	4.87	4.71	-13.38	3.12	4.77	4.73	11.97

U6-MC1458

PIN	1	2	3	4	5	6	7	8
STOP	0	0	0	-13.38	0	0	0	11.98
PLAY	0	0	0	-13.38	0	0	0	11.98